













 






 




















 






**Originalfernbedienung    Ersatzfernbedienung**

	Power		Power
	Source		AV / Input / RDS
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Nothing		Info / Angle
	Scan		Smart / List
	Red		Red / Netflix / Search
	Zoom		Zoom / Size

**Originalfernbedienung    Ersatzfernbedienung**

	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Subtitle		Subtitle / EQ
	Blue		Blue / Prime Video / Random
	Audio		Audio / Lang I/II
	FAV		Fav / Marker / PC
	Up		Up
	Stop		Stop / Hold
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Left		Left
	Enter		OK
	Right		Right
	Mode		Picture / Format
	Setup		Setup / OPT /
	Down		Down
	TTX		Text / Goto



