


 
 



 
 
 


 


 

 

 

 
 


 





 


 


 
 
 




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	PP		Pre Ch
	I-II		Dual
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	--		Guide
	P<P		Back
	Menu		Menu

 
 
 

 

 
 

 
 
 
Originalfernbedienung Ersatzfernbedienung

	Info		Info
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	P+		Ch +
	P-		Ch -
	Vol+		Vol +
	Vol-		Vol -
	Red/Sound		Red
	Green/Picture		Green
	Yellow/Feature		Yellow
	Blue/Install		Blue
	TV		TV/R
	AV		AV
	[≡]		Text
	[/≡]		Media





Originalfernbedienung Ersatzfernbedienung

	[≡o]	 AD SUBT	Subt
	[≡+]	 PICTURE FORMAT	Format
	[≡x]	 SETTINGS OPT	Options
	[≡◆]	 ECO 3D	3D
	[≡?]	 HOME SMART	Smart
	[≡i]	 CLEAR EXIT	Exit

Originalfernbedienung Ersatzfernbedienung

