






 



 
 
 

 

 

 



 





 
 





 

 




 




 



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	Source		AV
	P Mode		Format
	S Mode		Shift + Dual
	Audio I / II		Dual
	Sleep		Sleep
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0 / 10		0

Originalfernbedienung Ersatzfernbedienung

	-/-- / +10		Shift + Guide
	Recall / Program		Back
	TV Menu		Menu
	Exit		Exit
	Goto / Text		Text
	Display		Info
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK / Enter		Ok
	V -		Vol -
	V +		Vol +
	P -		Ch -
	P +		Ch +
	Red / DVD		Red
	Green / A-B		Green





Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
Yellow / Angle	Yellow		
Blue / Repeat	Blue		
Subtitle	Subt		
Play / Pause /	Play		
Size	3D		
D.Dis / Reveal	Smart		
D.Menu / Mix	D. Menu		
Zoom / Index	Shift + Eject		
I<< / Fav	I<<		
I<< / Fav	Pre Ch		
>>I / Subpage	>>I		
Stop / Language	Stop		
<< / Fav -	<<		
>> / Fav +	>>		
Eject / EPG	Guide		
Eject / EPG	Eject		

