


 

 

 
 
 
 

 
 



 
 
 
 

 

 
 
 
 


 
 





 
 


 



 


 

 
 

 
 


 
 
 

 

 








Originalfernbedienung Ersatzfernbedienung

	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	↔		Pre Ch
	Back		Back
	Menu		Menu
	Netflix		Media
	Internet		Smart
	Ok		Ok

Originalfernbedienung Ersatzfernbedienung

	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Vol+		Vol +
	Vol-		Vol -
	P+		Ch +
	P-		Ch -
	Mute		Mute
	i		Info
	Exit		Exit
	Source		AV
	Q.Menu		D. Menu
	EPG		Guide
	TXT		Text
	*		Format
	*/Q		3D





Originalfernbedienung Ersatzfernbedienung

	[>]	SETTINGS OPT	Options
LANG.	Lang	SOUND DUAL	Dual
SUBT.	Subt.	AD SUBT	Subt
	[+]	SHIFT + PICTURE FORMAT	Shift + Format
	TV	SEARCH TV/R	TV/R
	Red	A	Red
	Green	B	Green
	Yellow	C	Yellow
	Blue	D	Blue
	Rec	REC MODE	Rec
	Play	PLAY MODE	Play
	Stop		Stop
	Pause		Pause
	<<	<<	<<
	>>	>>	>>

Originalfernbedienung Ersatzfernbedienung