



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	1		1
	2		2
	3		3
	4		4
	6		6
	5		5
	7		7
	8		8
	9		9
	0		0
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	Repeat		Text
	Shuffle		Media
	Play		Play

Originalfernbedienung Ersatzfernbedienung

	Pause		Pause
	Stop		Stop
	>>		>>
	<<		<<
	>>		>>
	<<		<<
	Option		Options
	Display		Info
	Enter		Ok
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Folder Up		Ch +
	Folder Down		Ch -
	Clear		Exit
	Sleep		Sleep





Originalfernbedienung Ersatzfernbedienung

DIMMER	Dimmer	SEARCH TV/R	TV/R
TP	TP	FAV PRE-CH	Pre Ch
MONO	Mono	SOUND DUAL	Dual
PRESET (up)	Preset Up	SHIFT + UP	Shift + Up
PRESET (down)	Preset Down	SHIFT + DOWN	Shift + Down
MEMORY	Memory	REC MODE	Rec
TUNING (up)	Tuning Up	B	Green
TUNING (down)	Tuning Down	A	Red
CD	CD	SHIFT + 1	Shift + 1
USB	USB	SHIFT + 2	Shift + 2
AUX	AUX	SHIFT + 3	Shift + 3
TUNER	Tuner	SHIFT + 4	Shift + 4
iPod	iPod	SHIFT + 5	Shift + 5
Folder Up iPod	Folder Up iPod	SHIFT + + CH	Shift + Ch +
Folder Down iPod	Folder Down iPod	SHIFT + - CH	Shift + Ch -
REPEAT	Repeat iPod	HOME SMART	Smart
SHUFFLE	Shuffle iPod	SHIFT + APP MEDIA	Shift + Media

Originalfernbedienung Ersatzfernbedienung

ENTER	Enter iPod	SHIFT + OK	Shift + Ok
>>I	>>I iPod	SHIFT + RIGHT	Shift + Right
I<<	I<< iPod	SHIFT + LEFT	Shift + Left
MENU	Menu iPod	TOP MENU MENU	Menu
Play/Pause iPod	Play/Pause iPod	SHIFT + PLAY MODE	Shift + Play
Open/Close	Open/Close	ZOOM	Eject
CLOCK	Clock	E-MANUAL D.MENU	D. Menu
TIMER	Timer	TIMER AV	AV

