 


 
 

 



 






 



 









 






**Originalfernbedienung    Ersatzfernbedienung**

	Power		Power
	Standby	 + 	Shift + Power
	Volume+		Vol +
	Volume-		Vol -
	Mute		Mute
	Up / Preset/CH+		Up
	Down / Preset/CH-		Down
	Right /		Right
	Left / A/B/C/D/E-		Left
	Menu/Set Menu/Srch Mode		Menu
	Enter		Ok
	Return/Memory		Back
	Title/Level/Band		TV/R
	Display		Info
	Audio		Dual
	Pure Direct		Smart
	Straight		Media

**Originalfernbedienung    Ersatzfernbedienung**


 
	Classical		1
	Live/Club		2
	Entertain		3
	Movie		4
	Stereo		5
	Enhancer		6
	Sur.Decode		7
	Parameter		8
	Multi CH In		9
			0
	Sleep		Pre Ch
	<</Info		<<
	>>/Eon		>>
	I<</Mode PTY		I<<
	>>I/PTY Seek		>>I
	Scene 1		Red
	Scene 2		Green







**Originalfernbedienung    Ersatzfernbedienung**

	Power		Power
	Volume+		Vol +
	Volume-		Vol -
	Mute		Mute
	Band		TV/R
	Search Mode		AV
	Memory		Back
	Preset Up		Up
	Preset Down		Down
	Right A/B/C/D/E		Right
	Left A/B/C/D/E		Left
	Enter		Ok
	Display		Info
	1		1
	2		2
	3		3
	4		4

**Originalfernbedienung    Ersatzfernbedienung**

	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	ENT		Pre Ch
	Info		Red
	PTY Seek Start		Blue
	Eon		Green
	Mode PTY Seek		Yellow
	Power		Shift + Power
	Up V-AUX/Dock		Shift + Up
	Down		Shift + Down
	Right V-AUX/Dock		Shift + Right
	Left		Shift + Left
	Enter V-AUX/Dock		Shift + Ok







