



 

 

 

 

 

 

 



 

 


 












Originalfernbedienung    Ersatzfernbedienung

	Power		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Recall		Back
	Text		Text
	P.Mode		Shift + Format
	S.Mode		Shift + Dual
	Sleep		Sleep

Originalfernbedienung    Ersatzfernbedienung

	Audio		Dual
	CH+		Ch +
	CH-		Ch -
	Vol+		Vol +
	Vol-		Vol -
	Source		AV
	Display		Info
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Menu		Menu

 
 
 
 




Originalfernbedienung Ersatzfernbedienung

	Exit		Exit
	Subtitle		Subt
	Index		List
	Size		Format
	Reveal		D. Menu
	Play/Hold		Play
	Pause		Pause
	I<</Cancel		I<<
	>>I/Subpage		>>I
	Stop		Stop
	Rec		Rec
	FAV		Pre Ch
	<</FAV-		<<
	>>/FAV+		>>
	Mix		Smart
	EPG		Guide
	Media		Media

Originalfernbedienung Ersatzfernbedienung

	Timeshift		Options
	Tv/Radio		TV/R

