




 

 

 
 
 
 
 

 



 

 














 












 





 

 





Originalfernbedienung Ersatzfernbedienung

|   |          |   |        |
|---|----------|---|--------|
|    | Power    |    | Power  |
|    | Source   |    | AV     |
|    | Light    |    | Smart  |
|    | Text     |    | Text   |
|    | Subt     |    | Subt   |
|    | Audio    |    | Dual   |
|    | EPG      |    | Guide  |
|    | Sat List |    | List   |
|    | IPI      |    | Format |
|   | <<       |   | <<     |
|  | Play     |  | Play   |
|  | Pause    |  | Pause  |
|  | >>       |  | >>     |
|  | I<<      |  | I<<    |
|  | Stop     |  | Stop   |
|  | Rec      |  | Rec    |
|  | >>I      |  | >>I    |

Originalfernbedienung Ersatzfernbedienung

|   |             |   |         |
|---|-------------|---|---------|
|    | FAV         |    | Pre Ch  |
|    | Setup       |    | Options |
|    | Menu        |    | Menu    |
|    | Exit        |    | Exit    |
|    | Up          |    | Up      |
|    | Down        |    | Down    |
|    | Right       |    | Right   |
|    | Left        |    | Left    |
|    | OK          |    | Ok      |
|   | V+          |   | Vol +   |
|  | V-          |  | Vol -   |
|  | Mute        |  | Mute    |
|  | Info        |  | Info    |
|  | P+          |  | Ch +    |
|  | P-          |  | Ch -    |
|  | Red/Radio   |  | Red     |
|  | Green/Sleep |  | Green   |





Originalfernbedienung Ersatzfernbedienung

|  |              |  |        |
|--|--------------|--|--------|
|  | Yellow/S/M/D |  | Yellow |
|  | Blue/Res     |  | Blue   |
|  | 1            |  | 1      |
|  | 2            |  | 2      |
|  | 3            |  | 3      |
|  | 4            |  | 4      |
|  | 5            |  | 5      |
|  | 6            |  | 6      |
|  | 7            |  | 7      |
|  | 8            |  | 8      |
|  | 9            |  | 9      |
|  | 0            |  | 0      |
|  | 3D           |  | 3D     |
|  | Recall       |  | Back   |
|  |              |  |        |
|  |              |  |        |
|  |              |  |        |

Originalfernbedienung Ersatzfernbedienung

|  |  |  |  |
|--|--|--|--|
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |

