





 

 

 
 
 

 











 
 

 
 
 
 
 

 





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	ATV/DTV		D. Menu
	Recall		Back
	P.Mode		Format
	S.Mode		Dual
	Sleep		Sleep


 
Originalfernbedienung Ersatzfernbedienung

	MTS		Media
	Menu		Menu
	Source		AV
	Exit		Exit
	Display		Info
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter		Ok
	Vol+		Vol +
	Vol-		Vol -
	Rec		Rec
	Rec List		List
	Tv/Radio		TV/R
	FAV List		Pre Ch
	CH+		Ch +

 





Originalfernbedienung Ersatzfernbedienung

	CH-		Ch -
	Play		Play
	Pause/Time Shift		Pause
	<</Guide		<<
	>>/Aspect		>>
	Stop/Index		Stop
	I<</Cancel		I<<
	>>I/Sub.PG		>>I
	Freeze		Eject
	Subtitle		Subt
	Size		3D
	Reveal		Options
	Hold		Smart
	Text		Text
	Red		Red
	Green		Green
	Yellow		Yellow

Originalfernbedienung Ersatzfernbedienung

	Cyan		Blue
---	------	---	------

