

YAMAHA
HIFI
WS40850

Mandis Shop S.L.
Av. Cerdanyola N° 75 1º Of. 115 - Sant Cugat del Vallès (Barcelona)
info@mandis.es



Layout Keys	Direct	Shift	Layout Keys	Direct	Shift
POWER	Power		V	Down	Down iPod
MUTE	Mute		EXIT	Clear	
1	1		BACK	Return	
2	2		VOL+	Vol+	
3	3		VOL-	Vol-	
4	4		INFO	Setup	Display
5	5		RAW(IST)	Open/Close	TP
6	6		CH+	Tuning Up	Preset Up
7	7		CH-	Tuning Down	Preset Down
8	8		TEXT	Repeat	Repeat iPod
9	9		< ?	Audio	Mono
0	0		---	Subtitle	Pure Direct
VOID	Top Menu		TV/RADIO	Angle	
MENU	Menu	Menu iPod	OP+	Random	Option
>PLAY	Play		SOURCE	Dimmer	Shuffle iPod
[PAUSE	Pause	Play/Pause iPod	WFORMAT	Zoom	
[STOP	Stop		WIDE	On Screen	
uRECORD	Memory				
<<	<<				
>>	>>				
<<	<<				
>>	>>				
RFD	Disc				
GREEN	USB				
YELLOW	AUX				
BLUE	Tuner				
MEDIA	iPod				
EPG(GUIDE)	Sleep	Timer			
OK	Enter	Enter iPod			
^	Up	Up iPod			
<	Left	I<< iPod			
>	Right	>>I iPod			