



 





 

 

 



 

 

 

 

 

 

 



 







 

















 











Original	Replacement
 POWER	 Power
 INFO	 Info / Angle
 MUTE	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 SOURCE	 AV / Input / RDS
 0	 0
 AUDIO	 Audio / Lang I/II
 FORMAT	 Picture / Format
 BACK	 Back / Return

Original	Replacement
 MENU	 Menu / Home
 EXIT	 Exit / Cancel / Clear
 UP	 Up
 LEFT	 Left
 ENTER	 OK
 RIGHT	 Right
 VOL+	 Vol+
 DOWN	 Down
 CH+	 CH+ / Page+
 VOL-	 Vol-
 CH-	 CH- / Page-
 LIST	 Smart / List
 SLEEP	 Sleep / Timer
 EPG	 Guide / EPG / -/-
 FAV	 Fav / Marker / PC
 <<	 << / Tune-
 RED	 Red / Netflix / Search





	Original	Replacement	Original	Replacement
	 >>	 >> / Tune+		
	 GREEN	 Green / APP / Repeat		
	 I<<	 I<< / Preset-		
	 YELLOW	 Yellow / YouTube / Repeat		
	 BLUE	 Blue / Prime Video / Random		
	 >>I	 >>I / Preset+		
	 PLAY	 Play / Slow		
	 PAUSE	 Pause / Step / Freeze		
	 TEXT	 Text / Goto		
	 STOP	 Stop / Hold		
	 SUBTITLE	 Subtitle / EQ		
	 RADIO	 TV/Radio /		
	 OPT	 Setup / OPT /		
	 DMP	 Display / Media		
	 INDEX	 D.Menu / Top		
	 REC	 Rec / Rec Mode		

