 






 
 

 

 


 






 





























 
 


 


 

 


 






| Original | Replacement | Original | Replacement |
|---|-------------|---|-------------------------|
|  | POWER |  | Power |
|  | ←○ |  | Shift + Smart / List |
|  | **/Ö |  | Shift + Display / Media |
|  | *²/♀ |  | Shift + Red / Netflix / |
|  | SOURCE |  | AV / Input / RDS |
|  | PRESETS |  | Smart / List |
|  | ≡≡ |  | Setup / OPT / |
|  | ♪/☺/▶ |  | Display / Media |
|  | SLEEP |  | Sleep / Timer |
|  | 1 . /@ |  | 1 |
|  | 2 abc |  | 2 |
|  | 3 def |  | 3 |
|  | 4 ghi |  | 4 |
|  | 5 jkl |  | 5 |
|  | 6 mno |  | 6 |
|  | 7 pqrs |  | 7 |
|  | 8 tuv |  | 8 |
|  | 9 wxyz |  | 9 |
|  | TV |  | TV/Radio / |
|  | 0 |  | 0 |
|  | ↔ |  | Shift + Back / Return |
|  | TV GUIDE |  | Guide / EPG / -/- |
|  | [≡] |  | Text / Goto |
|  | MENU |  | Menu / Home |
|  | Q.MENU |  | D.Menu / Top |
|  | UP |  | Up |
|  | LEFT |  | Left |
|  | OK |  | OK |
|  | RIGHT |  | Right |
|  | DOWN |  | Down |
|  | BACK |  | Back / Return |
|  | →◻← |  | Picture / Format |
|  | EXIT |  | Exit / Cancel / Clear |
|  | *FAV |  | Fav / Marker / PC |





| Original | Replacement |
|--|---|
|  VOL+ |  Vol+ |
|  MUTE |  Mute / Dimmer |
|  P+ |  CH+ / Page+ |
|  VOL- |  Vol- |
|  INFO |  Info / Angle |
|  P- |  CH- / Page- |
|  REC |  Rec / Rec Mode |
|  PLAY |  Play / Slow |
|  PAUSE |  Pause / Step / Freeze |
|  STOP |  Stop / Hold |
|  LANG. |  Audio / Lang I/II |
|  <<< |  <<< / Tune- |
|  >>> |  >>> / Tune+ |
|  [≡]... |  Sound / Title |
|  RED |  Red / Netflix / Search |
|  GREEN |  Green / APP / Repeat |
|  YELLOW |  Yellow / YouTube / Repeat |

| Original | Replacement |
|--|---|
|  BLUE |  Blue / Prime Video / Random |

