


Original		Replacement		Original		Replacement	
	Power		Power		Exit		Exit / Cancel / Clear
	Source		AV / Input / RDS		Up		Up
	Sleep		Sleep / Timer		FAV		Fav / Marker / PC
	Picture Mode		Picture / Format		Left		Left
	Sound Mode		Sound / Title		OK		OK
	1		1		Right		Right
	2		2		Menu		Menu / Home
	3		3		Down		Down
	4		4		EPG		Guide / EPG / -/--
	5		5		Vol+		Vol+
	6		6		Audio		Audio / Lang I/II
	7		7		P+		CH+ / Page+
	8		8		Vol-		Vol-
	9		9		Mute		Mute / Dimmer
	FAV+		Shift + Up		P-		CH- / Page-
	0		0		Red		Red / Netflix / Search
	FAV-		Shift + Down		Green		Green / APP / Repeat

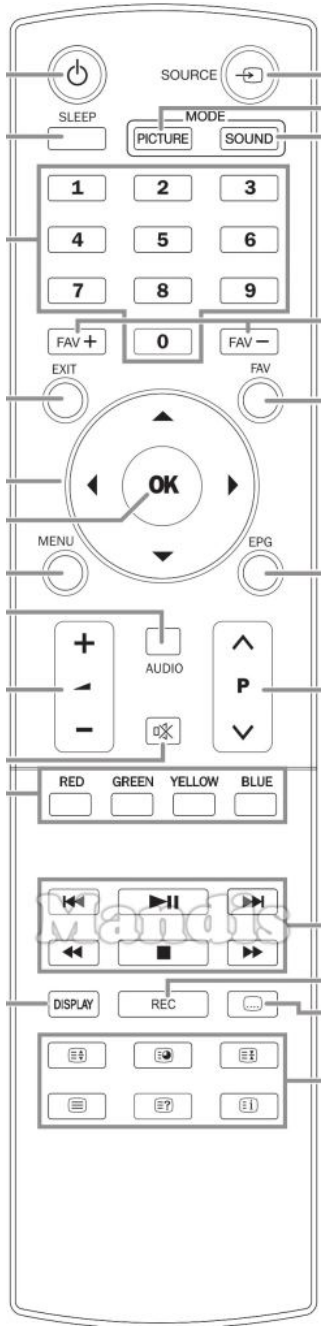



Original	Replacement
Yellow	Yellow / YouTube / Repeat
Blue	Blue / Prime Video / Random
I<<	I<< / Preset-
Pause	Pause / Step / Freeze
Play	Play / Slow
>>I	>>I / Preset+
<<	<< / Tune-
Stop	Stop / Hold
>>	>> / Tune+
Display	Display / Media
Rec	Rec / Rec Mode
[...]	Subtitle / EQ
[≡◆]	Zoom / Size
[≡○]	Eject / Surround
[≡+]	Shift + Stop /
[≡]	Text / Goto
[≡?]	Info / Angle

Original	Replacement
[≡i]	Smart / List

