



Original	Replacement	Original	Replacement
Power	Power	Vol+	Vol+
TV/RAD	TV/Radio /	Mute	Mute / Dimmer
Input	AV / Input / RDS	PR+/Page Up	CH+ / Page+
AV Mode	Picture / Format	Vol-	Vol-
Energy Saving	Eject / Surround	PR-/Page Down	CH- / Page-
1	1	Up	Up
2	2	Left	Left
3	3	OK	OK
4	4	Right	Right
5	5	Menu	Menu / Home
6	6	Down	Down
7	7	Return	Back / Return
8	8	Red	Red / Netflix / Search
9	9	Green/Stop	Green / APP / Repeat
List	Smart / List	Green/Stop	Stop / Hold
0	0	Yellow/Play	Yellow / YouTube / Repeat
Q.View	Display / Media	Yellow/Play	Play / Slow

Original	Replacement	Original	Replacement
Power	Power	Vol+	Vol+
TV/RAD	TV/Radio /	Mute	Mute / Dimmer
Input	AV / Input / RDS	PR+/Page Up	CH+ / Page+
AV Mode	Picture / Format	Vol-	Vol-
Energy Saving	Eject / Surround	PR-/Page Down	CH- / Page-
1	1	Up	Up
2	2	Left	Left
3	3	OK	OK
4	4	Right	Right
5	5	Menu	Menu / Home
6	6	Down	Down
7	7	Return	Back / Return
8	8	Red	Red / Netflix / Search
9	9	Green/Stop	Green / APP / Repeat
List	Smart / List	Green/Stop	Stop / Hold
0	0	Yellow/Play	Yellow / YouTube / Repeat
Q.View	Display / Media	Yellow/Play	Play / Slow





Original	Replacement
Blue/Pause	Blue / Prime Video / Random
Blue/Pause	Pause / Step / Freeze
Text/[≡]	Text / Goto
T.OPT/⟨⟨	⟨⟨ / Preset-
T.OPT/⟨⟨	Setup / OPT /
T.OPT/⟨⟨	<<< / Tune-
Subtitle/>>	>>> / Preset+
Subtitle/>>	Subtitle / EQ
Subtitle/>>	>>> / Tune+
Simplink	Sleep / Timer
Q.Menu	D.Menu / Top
Info	Info / Angle
Guide	Guide / EPG / -/--
FAV/Mark	Fav / Marker / PC

Original	Replacement

