 

 
 

 

 

 



 






 



 



 

















 



 










 



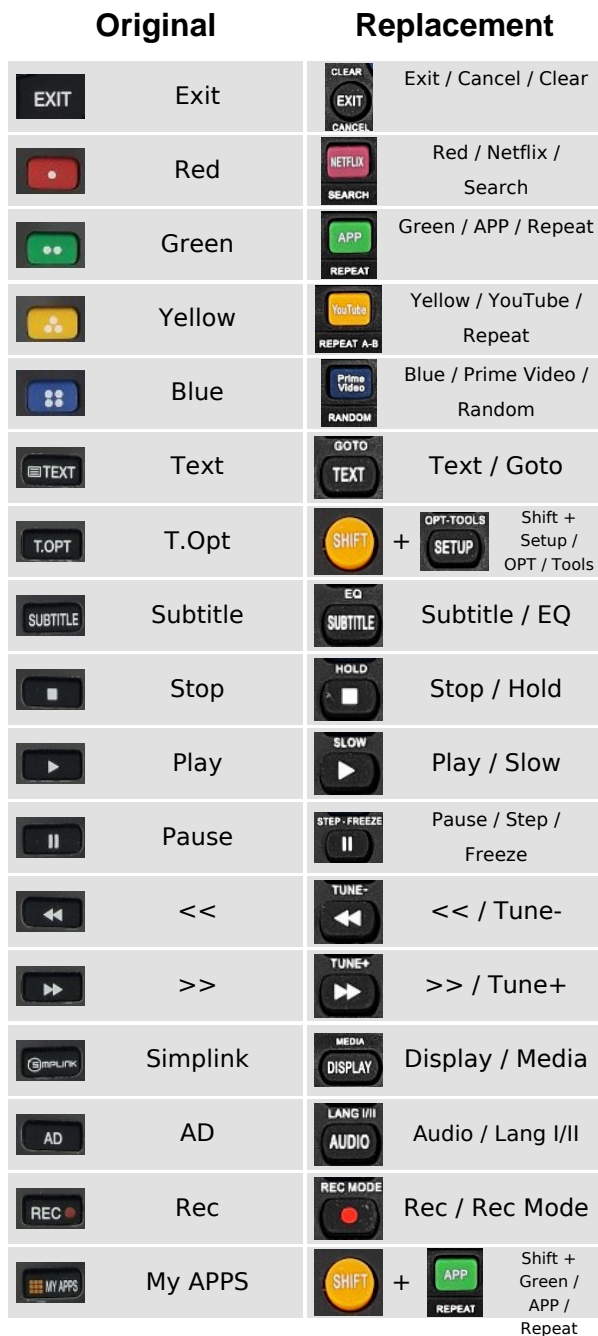 




Original	Replacement	Original	Replacement
	Power		Power
	Portal/Energy Saving		Sleep / Timer
	[]/Ratio		Picture / Format
	Input		AV / Input / RDS
	TV		TV/Radio /
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	List		Smart / List
	0		0
	Q.View		D.Menu / Top
	Vol+		Vol+
	Fav		Fav / Marker / PC
	PR+/Page Up		CH+ / Page+
	Vol-		Vol-
	3D		Zoom / Size
	PR-/Page Down		CH- / Page-
	Mute		Mute / Dimmer
	Settings		Setup / OPT /
	Info/Home		Info / Angle
	Q.Menu/3D		Menu / Home
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Down		Down
	Back		Back / Return
	Guide		Guide / EPG / -/-





POWER DIMMER MUTE SHIFT
 TV DVD SAT AUX
 SLOW STEP-FREEZE HOLD REC MODE
 TUNE- TUNE+ PRESET- PRESET+
 TITLE LANG VIII EQ SURROUND
 SOUND AUDIO SUBTITLE
 FORMAT SIZE TIMER PROGRAM
 PICTURE ZOOM SLEEP TV RADIO
 TOP MENU OPT-TOOLS GOTO RDS
 D.MENU SETUP TEXT AV INPUT
 HOME ANGLE
 MENU INFO
 OK
 CLEAR RETURN
 EXIT BACK
 CANCEL
 + VOL-
 LIST SMART
 MEDIA DISPLAY
 + CH PAGE
 TV DVD CD-STR
 1 2 3
 VIDEO TAPE TUNER
 4 5 6
 AUX-HDD USB BLUETOOTH
 7 8 9
 -- -- HDMI-BAT PC
 GUIDE 0 FAV MARKER
 NETFLIX APP YouTube Prime Video
 SEARCH REPEAT REPEAT A-B RANDOM
 Mandis
 www.mandis.tv