



Original		Replacement		Original		Replacement	
	Power		Power		9		9
	Sleep		Sleep / Timer		EPG		Guide / EPG / -/-
	Screen		Picture / Format		0		0
	Presets		Setup / OPT /		Swap		Fav / Marker / PC
	↔		TV/Radio /		Photo/Music/Movi		D.Menu / Top
	FAV		Shift + Fav / Marker / PC		World		Smart / List
	Lang		Audio / Lang I/II		Source		AV / Input / RDS
	Subtitle		Subtitle / EQ		Menu		Menu / Home
	TXT		Text / Goto		Up		Up
	1		1		Left		Left
	2		2		OK		OK
	3		3		Right		Right
	4		4		Down		Down
	5		5		C		Exit / Cancel / Clear
	6		6		Disp.		Display / Media
	7		7		Search Mode		Shift + Red / Netflix /
	8		8		Return		Back / Return





	Original	Replacement		Original	Replacement
			CH+		Yellow / YouTube / Repeat
			Info		Blue / Prime Video / Random
			Vol+		
			CH-		
			Mute		
			Vol-		
			Rec		
			Pause		
			I<<		
			>>I		
			<<		
			Play		
			Stop		
			>>		
			Red/↑/Zoom		
			Red/↑/Zoom		
			Green/↓/Repeat		

