



Original	Replacement
	 Power
	 Mute / Dimmer
	 Shift + Audio / Lang I/II
	 Shift + Picture / Format
	 Picture / Format
	 Sound / Title
	 1
	 2
	 3
	 4
	 5
	 6
	 7
	 8
	 9
	 Shift + Guide / EPG / -/-
	 0

Original	Replacement
	 Back / Return
	 Display / Media
	 Pause / Step / Freeze
	 Rec / Rec Mode
	 Red / Netflix / Search
	 Green / APP / Repeat
	 Yellow / YouTube / Repeat
	 Blue / Prime Video / Random
	 Sleep / Timer
	 Up
	 AV / Input / RDS
	 Left
	 OK
	 Right
	 Down
	 Menu / Home
	 Exit / Cancel / Clear





Original	Replacement
CH+    CH	CH+ / Page+    CH PAGE
Subtitle    SUBTITLE	Subtitle / EQ    EQ SUBTITLE
Vol+    VOL	Vol+    VOL
CH-    CH	CH- / Page-    CH PAGE
T.Shift    T SHIFT	Setup / OPT /    OPT-TOOLS SETUP
Vol-    VOL	Vol-    VOL
Play/Pause/Hold    HOLD	Play / Slow    SLOW
Play/Pause/Hold    HOLD	Shift + Stop /    SHIFT + HOLD
<</Reveal    REVEAL	<< / Tune-    TUNE-
>>/Size    SIZE	Zoom / Size    ZOOM
>>/Size    SIZE	>> / Tune+    TUNE+
Stop/Index    INDEX	Stop / Hold    HOLD
I<<    PRESET-	I<< / Preset-    PRESET-
S.Page/>>I    S PAGE	>>I / Preset+    PRESET+
Text    TEXT	Text / Goto    GOTO TEXT
FAV	Fav / Marker / PC    PC FAV MARKER
Audio    AUDIO	Audio / Lang I/II    LANG I/II AUDIO

Original	Replacement
DTV    DTV	Smart / List    LIST SMART
EPG    EPG	Guide / EPG / -/-    GUIDE EPG
Tv/Radio    TV/RADIO	TV/Radio /    PROGRAM TV/RADIO

