





















 

 

 

 

 
 






Original	Replacement
 Power	 Power
 Info	 Info / Angle
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Source	 AV / Input / RDS
 0	 0
 O)/I-II/Audio	 Audio / Lang I/II
 Menu	 Menu / Home
 Exit	 Exit / Cancel / Clear

Original	Replacement
 Up	 Up
 Left	 Left
 Enter	 OK
 Right	 Right
 Down	 Down
 CH+	 CH+ / Page+
 Index	 Display / Media
 Vol+	 Vol+
 CH-	 CH- / Page-
 List	 Smart / List
 Vol-	 Vol-
 ♥	 Fav / Marker / PC
 Sleep	 Sleep / Timer
 EPG	 Guide / EPG / -/-
 Recall	 Back / Return
 Red	 Red / Netflix / Search
 <<	 << / Tune-







































	Original	Replacement	Original	Replacement
	 Green	 Green / APP / Repeat		
	 >>	 >> / Tune+		
	 Yellow	 Yellow / YouTube / Repeat		
	 I<<	 I<< / Preset-		
	 Blue	 Blue / Prime Video / Random		
	 >>	 >>  / Preset+		
	 [=]	 Text / Goto		
	 Play	 Play / Slow		
	 Pause	 Pause / Step / Freeze		
	 [=+]	 Zoom / Size		
	 Stop/Still	 Stop / Hold		
	 Radio	 TV/Radio /		
	 [=◆]/[++]	 Setup / OPT /		
	 [=x]	 Picture / Format		
	 [=o]/Subtitle	 Subtitle / EQ		
	 DMP	 D.Menu / Top		
	 Rec	 Rec / Rec Mode		














 




 

 

 


 

 




 
 


Original	Replacement
 Power	 Power
 Mute	 Mute / Dimmer
 Text / Play/Pause	 Play / Slow
 Text / Play/Pause	 Pause / Step / Freeze
 Stop / Still	 Stop / Hold
 Rec	 Rec / Rec Mode
 Audio I/II	 Audio / Lang I/II
 Subtitle / [≡o]	 Subtitle / EQ
 [≡x]	 Picture / Format
 Size / Aspect	 Zoom / Size
 Sleep	 Sleep / Timer
 Radio	 TV/Radio /
 DMP	 D.Menu / Top
 Source	 AV / Input / RDS
 Menu	 Menu / Home
 Up	 Up
 Info	 Info / Angle

Original	Replacement
 Left	 Left
 Enter	 OK
 Right	 Right
 Exit	 Exit / Cancel / Clear
 Down	 Down
 Recall	 Back / Return
 Vol +	 Vol+
 List	 Smart / List
 CH +	 CH+ / Page+
 Vol -	 Vol-
 Index	 Display / Media
 CH -	 CH- / Page-
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5





	Original	Replacement	Original	Replacement
	6	 6		
	7	 7		
	8	 8		
	9	 9		
	EPG	 Guide / EPG / -/-		
	0	 0		
	Fav	 Fav / Marker / PC		
	Red / <<	 Red / Netflix / Search		
	Green / >>	 Green / APP / Repeat		
	Yellow /  <<	 Yellow / YouTube / Repeat		
	Blue / >>	 Blue / Prime Video / Random		
	Text / Play/Pause	 Shift + Play /		
	Red / <<	 Shift + Red / Netflix /		
	Green / >>	 Shift + Green / APP /		
	Yellow /  <<	 Shift + Yellow / YouTube /		
	Blue / >>	 Shift + Blue / Prime		

