



Original		Replacement		Original		Replacement	
	Power		Power		Left		Left
	(o)		Format		OK		Ok
	♪		Dual		P+		Ch +
	[AIB]		List		P-		Ch -
	Input		AV		Vol+		Vol +
	[≡]		Text		Vol-		Vol -
	Mute		Mute		1		1
	16:9		3D		2		2
	Red		Red		3		3
	Green		Green		4		4
	Yellow		Yellow		5		5
	Blue		Blue		6		6
	[■]		Menu		7		7
	X		Exit		8		8
	Up		Up		9		9
	Down		Down		0		0
	Right		Right		Recall		Pre Ch



 



	Original		Replacement	
	[   ]		GUIDE	Guide
	[≡i]		DISPLAY INFO	Info
	[...]		AD SUBT	Subt
	[ ]		SETTINGS OPT	Options
	[≡?]/(↔)		SEARCH TV/R	TV/R
	I-II-▼/Lang		HOME SMART	Smart
	[≡x]/Timer		APP MEDIA	Media
	[≡♦]		RETURN BACK	Back
	[≡+]		PROG SLEEP	Sleep

Original	Replacement





Original		Replacement		Original		Replacement	
	Power		Power		3		3
	Input		AV		4		4
	[M]		Menu		5		5
	Up		Up		6		6
	Down		Down		7		7
	Right		Right		8		8
	Left		Left		9		9
	OK		Ok		0		0
	P+		Ch +		I-II-▼/Lang		Dual
	P-		Ch -		[≡◆]		Back
	Play		Play				
	<<		<<				
	Pause		Pause				
	>>		>>				
	Stop		Stop				
	1		1				
	2		2				

