 

 

 
 

 




 
 


 
 



 






 


 
 



 
 

 
 


 
 
 









 



 












Original	Replacement	Original	Replacement
 Power	 Power	 >>	 >>
 Tv/HMR	 TV/R	 Rec	 Rec
 1	 1	 Source	 AV
 2	 2	 Vol+	 Vol +
 3	 3	 Vol-	 Vol -
 4	 4	 →/CM Skip	 Ch +
 5	 5	 ←/INS Replay	 Ch -
 6	 6	 Pause/Step	 Pause
 7	 7	 Stop	 Stop
 8	 8	 Play	 Play
 9	 9	 I>/Slow	 Smart
 0	 0	 Return	 Back
 Goto	 Pre Ch	 Home/Guide	 Guide
 Mute	 Mute	 Display	 Info
 I<<	 I<<	 HDD	 Red
 >>I	 >>I	 USB	 Green
 <<	 <<	 LAN	 Yellow



