









 

 























 







 
 




 



 











 





Original	Replacement	Original	Replacement
	Source		AV / Input / RDS
	Power		Power
	TV		TV/Radio /
	TV		Shift + 1
	Quick		D.Menu / Top
	[]		Display / Media
	List		Smart / List
	Vol+		Vol+
	AD		Audio / Lang I/II
	P+		CH+ / Page+
	Vol-		Vol-
	Mute		Mute / Dimmer
	P-		CH- / Page-
	Menu		Menu / Home
	Up		Up
	Guide		Guide / EPG / -/--
	Left		Left
	OK		OK
	Right		Right
	Back		Back / Return
	Down		Down
	Exit		Exit / Cancel / Clear
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8





Original		Replacement		Original		Replacement	
	9		9				
	[i+]		Info / Angle				
	0		0				
	Recall		Fav / Marker / PC				
	<< / [≡+]		<< / Tune-				
	Play		Play / Slow				
	>> / [≡◆]		>> / Tune+				
	I<< / [≡?]		I<< / Preset-				
	Stop		Stop / Hold				
	>>I / [o]/[≡X]		>>I / Preset+				
	Rec		Rec / Rec Mode				
	Pause/Step		Pause / Step / Freeze				
	Text		Text / Goto				

