







 

























 

 

 

 































Original	Replacement
	 Power
	 Mute / Dimmer
	 1
	 2
	 3
	 Eject / Surround
	 4
	 5
	 6
	 Shift + Text /
	 7
	 8
	 9
	 0
	 Menu / Home
	 AV / Input / RDS
	 Up

Original	Replacement
	 Left
	 OK
	 Right
	 Down
	 D.Menu / Top
	 Exit / Cancel / Clear
	 Vol+
	 Sound / Title
	 CH- / Page-
	 Vol-
	 Picture / Format
	 CH+ / Page+
	 Sleep / Timer
	 Shift + Picture / Format
	 Setup / OPT /
	 Shift + Back / Return
	 Text / Goto





Original	Replacement	Original	Replacement
EPG	Guide / EPG / -/--	Subtitle	Subtitle / EQ
Play	Play / Slow	Reveal	Shift + Exit / Cancel / Clear
Pause	Pause / Step / Freeze	Hold	Shift + Stop /
Stop	Stop / Hold	List	Smart / List
FAV	Fav / Marker / PC	Index	TV/Radio /
Info	Info / Angle	Subpage	Shift + Smart / List
Red/DVD/USB	Red / Netflix / Search	Size	Zoom / Size
Green/Title	Green / APP / Repeat	Mix	Shift + Display / Media
Yellow/PBC	Yellow / YouTube / Repeat	Freeze	Shift + Pause / Step /
Blue/Angle	Blue / Prime Video / Random		
<<	<< / Tune-		
>>	>> / Tune+		
I<<	I<< / Preset-		
>>I	>>I / Preset+		
Return	Back / Return		
Display	Display / Media		
DVD Audio	Audio / Lang I/II		

Original	Replacement	Original	Replacement
Subtitle	Subtitle / EQ		
Reveal	Shift + Exit / Cancel / Clear		
Hold	Shift + Stop /		
List	Smart / List		
Index	TV/Radio /		
Subpage	Shift + Smart / List		
Size	Zoom / Size		
Mix	Shift + Display / Media		
Freeze	Shift + Pause / Step /		

