









 



 

 

 

 
 





 
 


Original	Replacement
	Power
	Source
	1
	2
	3
	4
	5
	6
	7
	8
	9
	TV
	0
	Recall
	Vol+
	Mute
	PR+

Original	Replacement
	Vol-
	World/Internet
	PR-
	Menu
	Q.Menu
	Up
	Left
	OK
	Right
	Down
	Back
	Exit
	i
	Camera/Music/Ph
	Guide
	*/o
	*/o..





Original	Replacement	Original	Replacement
 [=]/Text	 Text / Goto		
 Red	 Red / Netflix / Search		
 Green	 Green / APP / Repeat		
 Yellow	 Yellow / YouTube / Repeat		
 Blue	 Blue / Prime Video / Random		
 Lang	 Audio / Lang I/II		
 [=]..	 Shift + Text /		
 [-o-]	 Setup / OPT /		
 <<	 << / Tune-		
 Pause	 Pause / Step / Freeze		
 >>	 >> / Tune+		
 Rec	 Rec / Rec Mode		
 Play	 Play / Slow		
 Stop	 Stop / Hold		

