
 

 
 

 

 
 
 
 
 
 
 
 

 

 




 
 

 
 




Original	Replacement
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 -/--	 SHIFT + -/-- Guide
 EPG	 -/-- Guide
 MODE	 HOME SMART
 MENU	 TOP MENU MENU
 MENU	 CLEAR EXIT
 OK	 OK

Original	Replacement
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 Back	 RETURN BACK
 i	 DISPLAY INFO
 Red	 A
 Green	 B
 Yellow	 C
 Blue	 D
 P+	 + CH
 P-	 CH -
 V+	 + VOL
 V-	 VOL -
 Mute	 MUTE

