 


 


 

 
 
 
 
 
 
 
 
 


 
 


 

 
 
 

 
 



 
 
 
 
 

 
 
 
 

 







Original	Replacement	Original	Replacement
	Power		Power
	Mute		Mute
	Vol+		Vol +
	Vol-		Vol -
	Prog+		Ch +
	Prog-		Ch -
	[≡]/TXT		Text
	[+]/Display		Info
	Tv/DVB-T		Smart
	[ ]/Line		Media
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	-/--		Shift + Guide
	PRE		Pre Ch
	Up/P+		Up
	Down/P-		Down
	Right/Vol+		Right
	Left/Vol-		Left
	[II]/Tv Menu		Menu
	-IXI-/Exit		Exit
	Timer/Sleep		Shift + Power
	-I/I-/P.STD		Shift + Format
	-I/I-/S.STD		Shift + Dual
	[<>]/P.Size		Format
	Open/Close		Eject
	Rec		Rec





Original	Replacement	Original	Replacement
	Stop		[ /≡]/Audio
	Play		SOUND DUAL Dual
	Pause		AD SUBT Subt
	<</< Slow		SETTINGS OPT Options
	Slow >/>>		SEARCH TVR TV/R
	l<</<l Step		[<≡]/List/Angle
	Step l>/>>l		[<≡] + CH - Shift + Ch -
	Red/Setup		[≡>]/Bookmark/O
	Green/Input		[≡o]/Zoom/EPG
	Yellow/Title		[≡X]/Cancel/i
	Blue/Menu		MS
	PIP On/Off		[▼]/Still
	PIP Source		OK
	PIP Sound		
	PIP Swap		
	Timer/repeat		
	[≡i]/A-B		
			SHIFT + 3D Shift + 3D
			SHIFT + AV Shift + AV
			SHIFT + TVR Shift + TV/R
			SHIFT + SUBT Shift + Subt
			SHIFT + TEXT Shift + Text
			SHIFT + INFO Shift + Info

