











Original	Replacement
	Mute / Dimmer
	Power
	1
	2
	3
	4
	5
	6
	7
	8
	9
	Menu / Home
	0
	Exit / Cancel / Clear
	Up
	CH+ / Page+
	Vol-

Original	Replacement
	Left
	OK
	Vol+
	Right
	CH- / Page-
	Down
	Guide / EPG / -/--
	Red / Netflix / Search
	Text / Goto
	Blue / Prime Video / Random
	Audio / Lang I/II
	Green / APP / Repeat
	Yellow / YouTube / Repeat
	Subtitle / EQ
	Info / Angle
	Fav / Marker / PC
	TV/Radio /



Program



Original	Replacement	Original	Replacement
	Video		Shift + 4
	Scan		AV / Input / RDS
	Record		Rec / Rec Mode
	Device		Smart / List
	File		Display / Media
	Zoom		Zoom / Size
	Prev		<< / Preset-
	Next		>> / Preset+
	Roll		Sound / Title
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	<<		<< / Tune-
	>>		>> / Tune+

Original	Replacement	Original	Replacement

