 

 

 

 
 
 

 





 

 

 
 
 

 

 



 
 
 
 

 
 
 


 
 


 
 


 


 
 



 

 
 
 

 
 
 
 

 
 



 
 


 







 
 
 

 

 

 

 
 
 
 
 


 
 

 




Original		Replacement		Original		Replacement	
	Power		Power		0		0
	Tv/AV		AV		Return		Back
	Exit		Exit		-/--		Guide
	Format		Format		Vol+		Vol +
	TDT Menu Tv		Menu		Vol-		Vol -
	Sound		Dual		Display		Shift + Info
	Timer		Shift + AV		Sys-Menu		Smart
	Picture		Shift + Format		OK		Ok
	1		1		Up		Up
	2		2		CH+		Ch +
	3		3		CH-		Ch -
	4		4		Down		Down
	5		5		Right		Right
	6		6		Left		Left
	7		7		Red/Prog/Tv/Radi		Red
	8		8		Green/Slow/Audio		Green
	9		9		Yellow/REP/Freeze		Yellow





	Original	Replacement		Original	Replacement
	 Blue/A-B/Subtitle	 Blue		 Nicam/A2	 Media
	 Play/Pause/Hold	 Play			
	 Stop/Size	 Stop			
	 <</Language	 <<			
	 >>/Text	 >>			
	 I<</FAV	 I<<			
	 >>I/EPG	 >>I			
	 Eject/Index	 Rec			
	 Goto/Subpage	 Pre Ch			
	 Title/Info	 Info			
	 Mute	 Mute			
	 ANG/Exit/Reveal	 +  Shift + Exit			
	 SUBT	 Subt			
	 Zoom/	 3D			
	 Lang/TDTProg-	 Sleep			
	 Menu/TvFormat/Cancel	 TV/R			
	 Set/TDT-Menu/Tv/	 Text			



TXT