







 

 

 





 





 

 




 



 


 



 
 


Original	Replacement
	 Power
	 Display / Media
	 Mute / Dimmer
	 Pause / Step / Freeze
	 1
	 2
	 3
	 4
	 5
	 6
	 7
	 8
	 9
	 Info / Angle
	 0
	 Back / Return
	 Red / Netflix / Search

Original	Replacement
	 Blue / Prime Video / Random
	 Green / APP / Repeat
	 Yellow / YouTube / Repeat
	 Shift + Picture / Format
	 Audio / Lang I/II
	 Menu / Home
	 AV / Input / RDS
	 Exit / Cancel / Clear
	 Up
	 CH+ / Page+
	 Left
	 OK
	 Right
	 Down
	 Vol+
	 CH- / Page-
	 Vol-





	Original	Replacement	
	Picture	 Picture / Format	
	Sound	 Sound / Title	
	Text	 Text / Goto	
	HDMI	 +  Shift + 0	
	VGA	 +  Shift + 4	
	Guide/Zoom	 Zoom / Size	
	Guide/Zoom	 Guide / EPG / -/--	
	Index/Subtitle	 Subtitle / EQ	
	Sleep/Hold	 Sleep / Timer	
	Sleep/Hold	 Stop / Hold	
	Lang/Cancel	 +  Shift + Exit / Cancel / Clear	
	Lang/Cancel	 +  Shift + Audio / Lang I/II	
	FAV/Sub.code	 Fav / Marker / PC	
	TV/Reveal	 Smart / List	
	Comp./Mix	 Setup / OPT /	

Original	Replacement

