
 

 







 

 



 





 





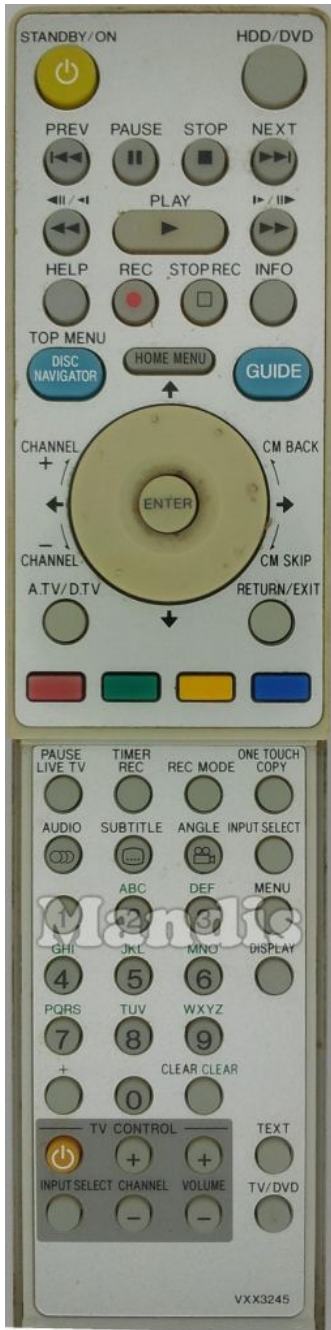 


Original	Replacement
 Standby/On	 Power
 I<<	 I<<
 Pause	 Pause
 Stop	 Stop
 >>I	 >>I
 Play	 Play
 <</II/<I	 <<
 I>/II/>>	 >>
 Rec	 Rec
 Stop Rec	 Shift + Stop
 Info	 Info
 Home Menu	 Menu
 Help	 Shift + Smart
 Disc Navigator/Top	 Smart
 Guide	 Guide
 Return/Exit	 Exit
 A.TV/D.TV	 Back

Original	Replacement
 Enter	 Ok
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 Channel+/CM	 Ch +
 CH+ Tv	 Shift + Ch +
 Channel-/CM Back	 Ch -
 Red	 Red
 Green	 Green
 Yellow	 Yellow
 Blue	 Blue
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5





Original	Replacement
6	6
7	7
8	8
9	9
0	0
Clear	+ Shift + Exit
O)/Audio	Dual
[...] /Subtitle	Subt
Camera/Angle	Options
Input Select	AV
Menu	List
Display	+ Shift + Info
Power Tv	+ Shift + Power
Input Select Tv	+ Shift + AV
CH- Tv	+ Shift + Ch -
Vol+ Tv	Vol +
+	TV/R

Original	Replacement
Pause Line Tv	Text
Timer Rec	Format
Rec Mode	+ Shift + Rec
One Touch	Media
HDD/DVD	+ Shift + Media
Text	Sleep
Tv/DVD	+ Shift + TV/R
Vol- Tv	Vol -

