





 


 
 






Original	Replacement
 Source	 AV / Input / RDS
 Power Tv	 Power
 [+]	 Shift + OK
 3D	 Zoom / Size
 Theatre	 Shift + Smart / List
 <</<I	 << / Tune-
 Play	 Play / Slow
 >>/I>	 >> / Tune+
 Sync Menu	 Shift + D.Menu / Top Menu
 I<<	 I<< / Preset-
 Stop	 Stop / Hold
 >>I	 >>I / Preset+
 ?/i-Manual	 Shift + Setup / OPT / Tools
 Scene	 Picture / Format
 BD/DVD Top	 Shift + Menu /
 BD/DVD Menu	 D.Menu / Top
 Digital/Analog	 Shift + Display / Media

Original	Replacement
 Exit	 Exit / Cancel / Clear
 Internet Widgets	 Display / Media
 Internet Video	 Smart / List
 ♥/FAV	 Fav / Marker / PC
 Guide	 Guide / EPG / -/-
 Right	 Right
 [i+]/Info	 Info / Angle
 Up	 Up
 OK	 OK
 Left	 Left
 Return	 Back / Return
 Down	 Down
 Options	 Setup / OPT /
 Home	 Menu / Home
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat






Original	Replacement
	Blue / Prime Video / Random
	1
	2
	3
	4
	5
	6
	7
	8
	9
	[≡]/Text
	0
	[...]
	Vol+
	CH+ / Page+
	Mute / Dimmer
	Audio / Lang I/II

Original	Replacement
	Vol-
	CH- / Page-






 









 









 

 

 

 





Original	Replacement
 Power	 Power
 <</<	 << / Tune-
 Play	 Play / Slow
 >>/ >	 >> / Tune+
 <<	 << / Preset-
 Stop	 Stop / Hold
 >>	 >> / Preset+
 Top Menu	 D.Menu / Top
 Menu	 Menu / Home
 Right	 Right
 [i+]/Info	 Info / Angle
 Up	 Up
 Left	 Left
 Return	 Back / Return
 Down	 Down
 Home	 Shift + Home / Menu /
 1	 1

Original	Replacement
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 [...]	 Subtitle / EQ
 Prog+	 CH+ / Page+
 Audio	 Audio / Lang I/II
 Prog-	 CH- / Page-







Original	Replacement
 Power	 Power
 <</<	 << / Tune-
 Play	 Play / Slow
 >>/ >	 >> / Tune+
 I<<	 I<< / Preset-
 Stop	 Stop / Hold
 >>	 >> / Preset+
 Top Menu	 D.Menu / Top
 Menu	 Menu / Home
 Right	 Right
 [i+]/Info	 Info / Angle
 Up	 Up
 OK	 OK
 Left	 Left
 Return	 Back / Return
 Down	 Down
 Options	 Setup / OPT /

Original	Replacement
 Home	 Shift + Menu /
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 [=]/Text	 Text / Goto
 0	 0
 [...]	 Subtitle / EQ



 




	Original	Replacement	Original	Replacement
	Audio	 Audio / Lang I/II		





Original	Replacement
	 AV / Input / RDS
	 Power
	 << / Tune-
	 Play / Slow
	 >> / Tune+
	 I<< / Preset-
	 Stop / Hold
	 >>I / Preset+
	 D.Menu / Top
	 Menu / Home
	 Right
	 Info / Angle
	 Up
	 OK
	 Left
	 Back / Return
	 Down

Original	Replacement
	 Shift + Menu /
	 1
	 2
	 3
	 4
	 5
	 6
	 7
	 8
	 9
	 Text / Goto
	 0
	 Subtitle / EQ
	 Vol+
	 Mute / Dimmer
	 Audio / Lang I/II
	 Vol-

