

 

 



 

 

 

 

 

 

 

 



 





 







 







 

 



 

 









 





Original	Replacement	Original	Replacement
 Power	 Power	 Info	 Info / Angle
 1	 1	 P-	 CH- / Page-
 2	 2	 Option	 Setup / OPT /
 3	 3	 TV	 TV/Radio /
 4	 4	 Source	 AV / Input / RDS
 5	 5	 Menu	 Menu / Home
 6	 6	 Smart TV	 Smart / List
 7	 7	 Guide	 Guide / EPG / -/-
 8	 8	 Up	 Up
 9	 9	 Left	 Left
 List	 Shift + Smart / List	 OK	 OK
 0	 0	 Right	 Right
 Pre-CH	 Shift + Back / Return	 Down	 Down
 Vol+	 Vol+	 Back	 Back / Return
 Mute	 Mute / Dimmer	 Exit	 Exit / Cancel / Clear
 P+	 CH+ / Page+	 3D	 Picture / Format
 Vol-	 Vol-	 Zoom	 Zoom / Size



