








 








Original		Replacement		Original		Replacement	
	Power		Power		FAV		Fav / Marker / PC
	Mute		Mute / Dimmer		Audio		Audio / Lang I/II
	V.Format		Picture / Format		[≡]		Text / Goto
			Pause / Step / Freeze		[...]		Subtitle / EQ
	A/R		Display / Media		Timer		Sleep / Timer
	Tv/Radio		TV/Radio /		Menu		Menu / Home
	1		1		Up		Up
	2		2		P+		CH+ / Page+
	3		3		Guide		Guide / EPG / -/--
	4		4		Left		Left
	5		5		Vol-		Vol-
	6		6		OK/List		Smart / List
	7		7		OK/List		OK
	8		8		Right		Right
	9		9		Vol+		Vol+
	Recall		Back / Return		Exit		Exit / Cancel / Clear
	0		0		Down		Down





Original	Replacement	Original	Replacement
 P-	 CH- / Page-		
 i	 Info / Angle		
 Red/F1	 Red / Netflix / Search		
 Green/F2	 Green / APP / Repeat		
 Yellow/F3	 Yellow / YouTube / Repeat		
 Blue/F4	 Blue / Prime Video / Random		
 SAT	 Shift + 0		
 AUX	 Shift + 7		

