





 

 

 



 

 


 


 








Original	Replacement
 Power	 Power
 Sleep	 Sleep
 Mute	 Mute
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 -/--	 SHIFT + -/-- Shift + Guide
 Recall	 RETURN BACK Back
 Source	 TIMER AV AV
 P.STD	 HOME SMART Smart

Original	Replacement
 S.STD	 APP MEDIA Media
 MENU/ATV	 TOP MENU MENU Menu
 Up	 Up
 Right	 Right
 Down	 Down
 Left	 Left
 OK	 OK Ok
 Vol+	 + VOL Vol +
 Vol-	 VOL - Vol -
 PR-	 CH - Ch -
 PR+	 + CH Ch +
 Freeze	 II Pause
 Info/Display	 DISPLAY INFO Info
 Menu/DVB	 E-MANUAL D.MENU D. Menu
 TTX [.]≡/TTX	 REPEAT TEXT Text
 I/II	 SOUND DUAL Dual
 [≡x]/Exit	 CLEAR EXIT Exit





	Original	Replacement	
	[≡◆]/EPG	GUIDE	Guide
	[≡+]/FAV	PRE-CH	Pre Ch
	[≡i]/TV.R	SEARCH TV/R	TV/R
	[≡?]/Subt	AD SUBT	Subt
	[≡o]/Aspect	PICTURE FORMAT	Format
	[≡..]	DISC NAV LIST	List
	Red	A	Red
	Green	B	Green
	Yellow	C	Yellow
	Blue	D	Blue

Original	Replacement

