





Original	Replacement
Power	Power
Power Tv	Shift + Power
Eject/Open-Close	Eject / Surround
AV Tv	Shift + AV / Input / RDS
1	1
2	2
3	3
PR/TRK+	Shift + CH+ /
PR+ Tv	CH+ / Page+
4	4
5	5
6	6
PR/TRK-	Shift + CH- /
PR- Tv	CH- / Page-
7	7
8	8
9	9

Original	Replacement
Vol+ Tv	Vol+
Tv/VCR	TV/Radio /
0	0
AV	AV / Input / RDS
Vol- Tv	Vol-
<</Backward	<< / Tune-
>>/Forward	>> / Tune+
I<< Skip	I<< / Preset-
Skip >>I	>>I / Preset+
Pause/Step	Pause / Step / Freeze
Play	Play / Slow
Stop	Stop / Hold
Display/CLK/CN	Display / Media
Up	Up
i/Setup	Info / Angle
Left	Left
OK/Enter	OK





Original	Replacement
	 Right
	 D.Menu / Top
	 Down
	 Back / Return
	 Audio / Lang I/II
	 Subtitle / EQ
	 Shift + Info / Angle
	 Zoom / Size
	 Rec / Rec Mode
	 Shift + Exit / Cancel / Clear
	 Sound / Title
	 Shift + TV/Radio / Program
	 Fav / Marker / PC
	 Red / Netflix / Search
	 Exit / Cancel / Clear
	 Green / APP / Repeat
	 Yellow / YouTube / Repeat

Original	Replacement
	 Smart / List





Original	Replacement
Power	Power
Power Tv	Shift + Power
Eject/Open-Close	Eject / Surround
AV Tv	Shift + AV / Input / RDS
1	1
2	2
3	3
PR/TRK+	Shift + CH+ /
PR+ Tv	CH+ / Page+
4	4
5	5
6	6
PR/TRK-	Shift + CH- /
PR- Tv	CH- / Page-
7	7
8	8
9	9

Original	Replacement
Vol+ Tv	Vol+
Tv7VCR	TV/Radio /
0	0
AV	AV / Input / RDS
Vol- Tv	Vol-
<</Backward	<< / Tune-
>>/Forward	>> / Tune+
I<< Skip	I<< / Preset-
Skip >>I	>>I / Preset+
Pause/Step	Pause / Step / Freeze
Play	Play / Slow
Stop	Stop / Hold
Display/CLK/CN	Display / Media
Up	Up
i/Setup	Info / Angle
Left	Left
K/Enter	OK



