 

 

 

 

 

 

 

 



 

 



 

 

 

 
 




Original	Replacement	Original	Replacement
Open/Close	Eject / Surround	Enter	OK
Power	Power	Right/Set+	Right
Tv/VCR	AV / Input / RDS	Clear/Cancel	Exit / Cancel / Clear
VCR	Shift + 4	CH-	CH- / Page-
DVD	Shift + 2	Down	Down
Clock Counter	Info / Angle	Return	Back / Return
Program	TV/Radio /	Stop	Stop / Hold
One Touch	Green / APP / Repeat	Pause/Step	Pause / Step / Freeze
Instant Skip	Text / Goto	Play	Play / Slow
Setup/VCR	Setup / OPT /	I<< Skip/Index-	I<< / Preset-
Zoom	Zoom / Size	<< / Tune-	<< / Tune-
I> Slow	Blue / Prime Video / Random	>> / Tune+	>> / Tune+
Top Menu	D.Menu / Top	Skip	>>I / Preset+
Up	Up	Rec/OTR	Rec / Rec Mode
CH+	CH+ / Page+	Timer Rec	Sleep / Timer
DVD Menu	Menu / Home	Play	Red / Netflix / Search
Left/Set-	Left	A-B RPT	Yellow / YouTube / Repeat





	Original	Replacement	Original	Replacement
	1	 1		
	2	 2		
	3	 3		
	Display/Call	 Display / Media		
	4	 4		
	5	 5		
	6	 6		
	Jump/Zero Return	 Guide / EPG / -/-		
	7	 7		
	8	 8		
	9	 9		
	0/AUX	 0		
	Camera/Angle/Counter Reset	 Picture / Format		
	[...]/Subtitle/ATR	 Subtitle / EQ		
	0)/Audio/Audio Select	 Audio / Lang I/II		
	Marker	 Fav / Marker / PC		

