



 



















 
















 


 
 

 
 

 










 

 



Original	Replacement
	 Power
	 Stop / Hold
	 Pause / Step / Freeze
	 Rec / Rec Mode
	 Play / Slow
	 << / Tune-
	 >> / Tune+
	 Smart / List
	 Exit / Cancel / Clear
	 Menu / Home
	 D.Menu / Top
	 Guide / EPG / -/--
	 AV / Input / RDS
	 Shift + Red / Netflix / Search
	 Picture / Format
	 TV/Radio /
	 Red / Netflix / Search

Original	Replacement
	 Green / APP / Repeat
	 Yellow / YouTube / Repeat
	 Blue / Prime Video / Random
	 Info / Angle
	 Setup / OPT /
	 Back / Return
	 Zoom / Size
	 Shift + Smart / List
	 Display / Media
	 Mute / Dimmer
	 OK
	 Up
	 Down
	 Left
	 Right
	 Vol+
	 Vol-





	Original	Replacement	Original	Replacement
		 CH+ / Page+		
		 CH- / Page-		
		 1		
		 2		
		 3		
		 4		
		 5		
		 6		
		 7		
		 8		
		 9		
		 0		
		 Subtitle / EQ		
		 Text / Goto		

