








 
 
 

 




Original	Replacement	Original	Replacement
 Power	 Power	 Menu	 Menu
 Mute	 Mute	 EPG	 Guide
 1	 1	 Exit	 Exit
 2	 2	 Up / CH + / I<<	 Up
 3	 3	 Down / CH - / >>I	 Down
 4	 4	 Right / Vol +	 Right
 5	 5	 Left / Vol -	 Left
 6	 6	 OK	 Ok
 7	 7	 Up / CH + / I<<	 I<<
 8	 8	 Down / CH - / >>I	 >>I
 9	 9	 Up / CH + / I<<	 Ch +
 0	 0	 Down / CH - / >>I	 Ch -
 FAV	 Shift + Pre Ch	 Left / Vol -	 Vol -
 Recall	 Pre Ch	 Right / Vol +	 Vol +
 Game	 Media	 Red / Zoom	 Red
 Auto	 Smart	 Green / Lan/Audio	 Green
 Info	 Info	 Yellow /	 Yellow

Original	Replacement	Original	Replacement
 MUTE	 MUTE	 TV	 AUX
 MUTE	 MUTE	 DVD	 REC MODE
 1	 1	 SAT	 PLAY MODE
 2	 2	 AUX	 PAUSE
 3	 3	 TV	 STOP
 4	 4	 DVD	 LEFT
 5	 5	 SAT	 RIGHT
 6	 6	 AUX	 DISC NAV
 7	 7	 TV	 SOUND
 8	 8	 DVD	 AD
 9	 9	 SAT	 SETTINGS
 0	 0	 AUX	 LIST
 FAV	 Pre Ch	 TV	 DUAL
 Recall	 Pre Ch	 DVD	 SUBT
 Game	 Media	 SAT	 OPT
 Auto	 Smart	 AUX	 PROG
 Info	 Info	 TV	 SEARCH
		 DVD	 PICTURE
		 SAT	 ECO
		 AUX	 SLEEP
		 TV	 TV/R
		 DVD	 FORMAT
		 SAT	 3D
		 AUX	 E-MANUAL
		 TV	 REPEAT
		 DVD	 ZOOM
		 SAT	 TIMER
		 AUX	 D.MENU
		 TV	 TEXT
		 DVD	 UP
		 SAT	 AV
		 AUX	 TOP MENU
		 TV	 INFO
		 DVD	 CLEAR
		 SAT	 EXIT
		 AUX	 RETURN
		 TV	 HOME
		 DVD	 SMART
		 SAT	 APP
		 AUX	 MEDIA
		 TV	 VOL +
		 DVD	 CH +
		 SAT	 CH -
		 AUX	 1
		 TV	 2
		 DVD	 3
		 SAT	 4
		 AUX	 5
		 TV	 6
		 DVD	 7
		 SAT	 8
		 AUX	 9
		 TV	 0
		 DVD	 FAV
		 SAT	 GUIDE
		 AUX	 PRE-CH
		 TV	 A
		 DVD	 B
		 SAT	 C
		 AUX	 D
		 TV	
		 DVD	



Play/Pause



	Original	Replacement	Original	Replacement
	Blue / Text			Blue
	Red / Zoom			Eject
	Green / Lan/Audio			Dual
	Yellow /			Play
	Yellow /			Pause
	Blue / Text			Text
	<< / Tv/Radio			<<
	<< / Tv/Radio			TV/R
	>> / Subtitle			>>
	>> / Subtitle			Subt

