 
 


 





 
 
 





Original	Replacement
 Power	 Power
 Source	 AV / Input / RDS
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Guide	 Guide / EPG / -/--
 Return	 Back / Return
 Eco	 D.Menu / Top
 Menu	 Menu / Home
 Exit	 Exit / Cancel / Clear

Original	Replacement
 Option	 Setup / OPT /
 OK	 OK
 Up	 Up
 Down	 Down
 PR+	 CH+ / Page+
 Right/Zoom+	 Right
 Left/Zoom-	 Left
 PR-	 CH- / Page-
 Info	 Info / Angle
 Mute	 Mute / Dimmer
 Vol+	 Vol+
 Vol-	 Vol-
 Text	 Text / Goto
 Subtitle	 Subtitle / EQ
 List	 Smart / List
 Red	 Red / Netflix / Search
 TV	 Display / Media





Original	Replacement	Original	Replacement
	Green APP REPEAT Green / APP / Repeat		
	Yellow YouTube REPEAT A-B Yellow / YouTube / Repeat		
	O)Lang LANG I/II AUDIO Audio / Lang I/II		
	Blue Prime Video RANDOM Blue / Prime Video / Random		

