 
 

 

 
 


 
 
 







Original		Replacement		Original		Replacement	
	Power		Power		3D		3D
	E-Manual		Shift + D. Menu		Vol+		Vol +
	[]/Ratio		Dual		Vol-		Vol -
	Input		AV		FAV		Pre Ch
	Tv/Rad		TV/R		Mute		Mute
	1		1		P+		Ch +
	2		2		P-		Ch -
	3		3		Menu		Menu
	4		4		Home		Smart
	5		5		Back		Back
	6		6		My		D. Menu
	7		7		Guide		Guide
	8		8		Exit		Exit
	9		9		Up		Up
	0		0		Down		Down
	List		List		Right		Right
	Q.View		Format		Left		Left





Original		Replacement		Original		Replacement	
	OK		Ok				
	Red		Red				
	Green		Green				
	Yellow		Yellow				
	Blue		Blue				
	Text		Text				
	Subtitle		Subt				
	Stop/Live Tv		Stop				
	T.Opt		Options				
	Play		Play				
	Pause		Pause				
	<<		<<				
	>>		>>				
	Rec		Rec				
	Info		Info				
	Simplink		Media				
	Saving Energy		Shift + 3D				

