 

















 





















 

 

 





 





 

 









 






 



 



 












Original	Replacement	Original	Replacement
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	AV/CL		AV / Input / RDS
	Zoom		Zoom / Size
	[...]/Subtitle		Subtitle / EQ
	Audio/Language		Audio / Lang I/II
	◀/Camera		Shift + Info / Angle
	?		Setup / OPT /
	ECO		Display / Media
	CEC		Smart / List
	Mute		Mute / Dimmer
	i		Info / Angle
	Z/Back		Back / Return
	PR+		CH+ / Page+
	Up		Up
	Vol-		Vol-
	Left		Left
	OK		OK
	Right		Right
	Vol+		Vol+
	Down		Down
	PR-		CH- / Page-
	TVG/Top Menu		Guide / EPG / -/--
	TVG/Top Menu		D.Menu / Top
	TXT/Menu		Text / Goto



 

























 






 








 



 
 






 

 
 








 
 



Original	Replacement	Original	Replacement
 TXT/Menu	 Menu / Home		
 Red	 Red / Netflix / Search		
 Green	 Green / APP / Repeat		
 Yellow	 Yellow / YouTube / Repeat		
 Blue	 Blue / Prime Video / Random		
 [ <> ]	 Shift + Zoom /		
 Rec/ >	 Rec / Rec Mode		
 Play	 Play / Slow		
 Pause	 Pause / Step / Freeze		
 Stop	 Stop / Hold		
  <	  << / Preset-		
 >	 >>  / Preset+		
 <<	 << / Tune-		
 >>	 >> / Tune+		






 







 







Original	Replacement	Original	Replacement
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	AV/CL		AV / Input / RDS
	Zoom		Zoom / Size
	[...]/Subtitle		Subtitle / EQ
	Audio/Language		Audio / Lang I/II
	◀/Camera	 + 	Shift + Info / Angle
	?		Setup / OPT /
	ECO		Display / Media
	CEC		Smart / List
	Mute		Mute / Dimmer
	i		Info / Angle
	Z/Back		Back / Return
	PR+		CH+ / Page+
	Up		Up
	Vol-		Vol-
	Left		Left
	OK		OK
	Right		Right
	Vol+		Vol+
	Down		Down
	PR-		CH- / Page-
	TVG/Top Menu		Guide / EPG / -/--
	TVG/Top Menu		D.Menu / Top
	TXT/Menu		Menu / Home





Original	Replacement	Original	Replacement
 TXT/Menu	 Text / Goto		
 Red	 Red / Netflix / Search		
 Green	 Green / APP / Repeat		
 Yellow	 Yellow / YouTube / Repeat		
 Blue	 Blue / Prime Video / Random		
 [ <> ]	 Shift + Zoom /		
 Rec/l>	 Rec / Rec Mode		
 Play	 Play / Slow		
 Pause	 Pause / Step / Freeze		
 Stop	 Stop / Hold		
  <	  << / Preset-		
 >	 >>  / Preset+		
 <<	 << / Tune-		
 >>	 >> / Tune+		



 

























 















 



 





 

 



 























 

 





















Original	Replacement	Original	Replacement
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	AV/CL		AV / Input / RDS
	Zoom		Zoom / Size
	[...]/Subtitle		Subtitle / EQ
	Audio/Language		Audio / Lang I/II
	◀/Camera		Shift + Info / Angle
	?		Setup / OPT /
	ECO		Display / Media
	CEC		Smart / List
	Mute		Mute / Dimmer
	i		Info / Angle
	Z/Back		Back / Return
	PR+		CH+ / Page+
	Up		Up
	Vol-		Vol-
	Left		Left
	OK		OK
	Right		Right
	Vol+		Vol+
	Down		Down
	PR-		CH- / Page-
	TVG/Top Menu		Guide / EPG / -/--
	TVG/Top Menu		D.Menu / Top
	TXT/Menu		Text / Goto





Original	Replacement	Original	Replacement
 TXT/Menu	 Menu / Home		
 Red / Netflix / Search	 Red / Netflix / Search		
 Green / APP / Repeat	 Green / APP / Repeat		
 Yellow / YouTube / Repeat	 Yellow / YouTube / Repeat		
 Blue / Prime Video / Random	 Blue / Prime Video / Random		
 [ <> ]	 Shift + Zoom /		
 Rec/ >	 Rec / Rec Mode		
 Play / Slow	 Play / Slow		
 Pause / Step / Freeze	 Pause / Step / Freeze		
 Stop / Hold	 Stop / Hold		
  <	  << / Preset-		
 >	 >>  / Preset+		
 <<	 << / Tune-		
 >>	 >> / Tune+		

