







 



















Original	Replacement	Original	Replacement
	Power		ECO
	1		Display / Media
	2		Smart / List
	3		Mute / Dimmer
	4		Info / Angle
	5		Back / Return
	6		Z/Back
	7		PR+
	8		CH+ / Page+
	9		Up
	0		Vol-
	AV/CL		Left
	Zoom		OK
	[...]/Subtitle		Right
	Audio/Language		Vol+
	◀/Camera		Down
	?		PR-
			CH- / Page-
			TVG/Top Menu
			Guide / EPG / -/--
			TVG/Top Menu
			D.Menu / Top
			TXT/Menu
			Text / Goto

 

























 
















 

 

 





 

 


 

 











Original	Replacement	Original	Replacement
 TXT/Menu	 Menu / Home		
 Red	 Red / Netflix / Search		
 Green	 Green / APP / Repeat		
 Yellow	 Yellow / YouTube / Repeat		
 Blue	 Blue / Prime Video / Random		
 [<>]	 Shift + Zoom /		
 Rec/l>	 Rec / Rec Mode		
 Play	 Play / Slow		
 Pause	 Pause / Step / Freeze		
 Stop	 Stop / Hold		
 <	 << / Preset-		
 >	 >> / Preset+		
 <<	 << / Tune-		
 >>	 >> / Tune+		





Original	Replacement	Original	Replacement
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	AV/CL		AV / Input / RDS
	Zoom		Zoom / Size
	[...]/Subtitle		Subtitle / EQ
	Audio/Language		Audio / Lang I/II
	◀/Camera	 + 	Shift + Info / Angle
	?		Setup / OPT /
	ECO		Display / Media
	CEC		Smart / List
	Mute		Mute / Dimmer
	i		Info / Angle
	Z/Back		Back / Return
	PR+		CH+ / Page+
	Up		Up
	Vol-		Vol-
	Left		Left
	OK		OK
	Right		Right
	Vol+		Vol+
	Down		Down
	PR-		CH- / Page-
	TVG/Top Menu		Guide / EPG / -/--
	TVG/Top Menu		D.Menu / Top
	TXT/Menu		Menu / Home









 



















Original	Replacement	Original	Replacement
	Text / Goto		
	Red / Netflix / Search		
	Green / APP / Repeat		
	Yellow / YouTube / Repeat		
	Blue / Prime Video / Random		
	Shift + Zoom /		
	Rec / Rec Mode		
	Play / Slow		
	Pause / Step / Freeze		
	Stop / Hold		
	I<< / Preset-		
	>>I / Preset+		
	<< / Tune-		
	>> / Tune+		

 

















 





















 

 

 





 





 

 











Original	Replacement	Original	Replacement
 TXT/Menu	 Menu / Home		
 Red	 Red / Netflix / Search		
 Green	 Green / APP / Repeat		
 Yellow	 Yellow / YouTube / Repeat		
 Blue	 Blue / Prime Video / Random		
 [<>]	 Shift + Zoom /		
 Rec/l>	 Rec / Rec Mode		
 Play	 Play / Slow		
 Pause	 Pause / Step / Freeze		
 Stop	 Stop / Hold		
 <	 << / Preset-		
 >	 >> / Preset+		
 <<	 << / Tune-		
 >>	 >> / Tune+		



 






 



 



 












Original	Replacement	Original	Replacement
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	AV/CL		AV / Input / RDS
	Zoom		Zoom / Size
	[...]/Subtitle		Subtitle / EQ
	Audio/Language		Audio / Lang I/II
	◀/Camera		Shift + Info / Angle
	?		Setup / OPT /
	ECO		Display / Media
	CEC		Smart / List
	Mute		Mute / Dimmer
	i		Info / Angle
	Z/Back		Back / Return
	PR+		CH+ / Page+
	Up		Up
	Vol-		Vol-
	Left		Left
	OK		OK
	Right		Right
	Vol+		Vol+
	Down		Down
	PR-		CH- / Page-
	TVG/Top Menu		Guide / EPG / -/-
	TVG/Top Menu		D.Menu / Top
	TXT/Menu		Text / Goto





Original	Replacement	Original	Replacement
 TXT/Menu	 Menu / Home		
 Red	 Red / Netflix / Search		
 Green	 Green / APP / Repeat		
 Yellow	 Yellow / YouTube / Repeat		
 Blue	 Blue / Prime Video / Random		
 [<>]	 Shift + Zoom /		
 Rec/l>	 Rec / Rec Mode		
 Play	 Play / Slow		
 Pause	 Pause / Step / Freeze		
 Stop	 Stop / Hold		
 l<	 l<< / Preset-		
 >l	 >>l / Preset+		
 <<	 << / Tune-		
 >>	 >> / Tune+		

