

 
 
 
 

 


 







 

 
 
 

 





 











 
 
 
 




 
 
 


Original	Replacement	Original	Replacement
 Standby	 Power	 Aspect	 Format
 Eject / Auto	 Eject	 Audio	 Dual
 Mute	 Mute	 Display	 Info
 1	 1	 Ch +	 Ch +
 2	 2	 Ch -	 Ch -
 3	 3	 Up	 Up
 4	 4	 Right	 Right
 5	 5	 Down	 Down
 6	 6	 Left	 Left
 7	 7	 Enter	 Ok
 8	 8	 Menu	 Menu
 9	 9	 DVD Setup / Exit	 Exit
 0	 0	 DVD Setup	 Options
 -/--	 Shift + Guide	 Input	 AV
 Recall	 Back	 P.Mode	 Shift + Format
 Vol+	 Vol +	 S.Mode	 Shift + Dual
 Vol-	 Vol -	 Sleep	 Sleep





Original	Replacement
 Fav	 Pre Ch
 Fav -	 Shift + Ch -
 Fav +	 Shift + Ch +
 EPG	 Guide
 Angle / Text	 Text
 Zoom / Hold	 Shift + Eject
 TV / Radio	 TV/R
 Subtitle	 Subt
 D.Menu / Index	 D. Menu
 Title / Size	 3D
 D.Disp / Reveal	 List
 Goto / Subpage	 Smart
 Slow / Media	 Media
 Play / Pause	 Play
 Pause	 Pause
 <<	 <<
 >>	 >>

Original	Replacement
 Rec	 Rec
 Stop	 Stop
 I<<	 I<<
 >>I	 >>I
 Red / Prog	 Red
 Green / Intro	 Green
 Yellow / Repeat	 Yellow
 Blue / A-B	 Blue

