

 





 
 

 
 



 

 


 



 



 



 
 


 



 

 



 


 

 

 




 
 



 







Original	Replacement	Original	Replacement
	Power		Power
	Tv/HDD		TV/R
	Tuner		Subt
	CAM		Media
	Guide		Guide
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	T/C		Pre Ch
	Back		Back
	HDD Browser		Smart
	Disc Menu		D. Menu
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	CH+		Ch +
	CH-		Ch -
	Stop		Stop
	Pause		Pause
	Play		Play
	I<</Day-		I<<
	>>/Day+		>>I
	Rec		Rec
	Back/Jump		<<
	FWD Jump		>>





	Original	Replacement		Original	Replacement
	Timer	 AV			
	Edit	 OPT			
	Tv Vol+	 VOL +			
	Tv Vol-	 VOL -			
	Text	 REPEAT TEXT			
	System	 TOP MENU MENU			
	[i+]/Info	 DISPLAY INFO			
	Red	 A			
	Green	 B			
	Yellow	 C			
	Blue	 D			

