 







 


 




	Original	Replacement		Original	Replacement
	Power		Power		Exit
	Mute		Mute		Up
	1		1		Down
	2		2		Right
	3		3		Left
	4		4		Ok
	5		5		Vol +
	6		6		Vol -
	7		7		Sound
	8		8		Pic
	9		9		Ch +
	0		0		Ch -
	Audio		Dual		Sleep
	Recall		Back		Aspect
	Tv Menu		Menu		Freeze
	Source		AV		Tv/Radio
	ChList		List		Text
					Exit
					Up
					Down
					Right
					Left
					Ok
					Vol +
					Vol -
					Shift + Dual
					Shift + Format
					Ch +
					Ch -
					Sleep
					Format
					Eject
					TV/R
					Text





	Original	Replacement		Original	Replacement
	Epg	 GUIDE	Guide		I<<
	Fav	 PRE-CH	Pre Ch		>>I
	Info	 INFO	Info		Play
	Red	 A	Red		Pause
	Green	 B	Green		Stop
	Yellow	 C	Yellow		Rec/Rep
	Blue	 D	Blue		
	Reveal	 MEDIA	Media		
	Hold	 D.MENU	D. Menu		
	Index	 SHIFT + INFO	Shift + Info		
	Subpage	 SHIFT + AV	Shift + AV		
	List	 SMART	Smart		
	Mix	 OPT	Options		
	Subtitle	 SUBT	Subt		
	Size	 3D	3D		
	<<		<<		
	>>		>>		

