

 



 







 

 

 



 
 
















 







 
 





 








 
 
 





Original	Replacement	Original	Replacement
 Power	 Power	 I/II	 Audio / Lang I/II
 1	 1	 Ok/Select	 OK
 2	 2	 Up	 Up
 3	 3	 Left	 Left
 4	 4	 Right	 Right
 5	 5	 Down	 Down
 6	 6	 Menu	 Menu / Home
 7	 7	 TV/DTV	 TV/Radio /
 8	 8	 CH+ / Page+	 CH+ / Page+
 9	 9	 Vol+	 Vol+
 AV/Source	 AV / Input / RDS	 CH-	 CH- / Page-
 0	 0	 Mute	 Mute / Dimmer
 Exit/--	 Shift + Guide / EPG / --	 Vol-	 Vol-
 Exit/--	 Exit / Cancel / Clear	 Red/↑	 Shift + CH+ /
 P<P/SWAP	 Fav / Marker / PC	 Red/↑	 Red / Netflix / Search
 Info	 Info / Angle	 Green/↓	 Shift + CH- /
 PP	 Back / Return	 Green/↓	 Green / APP / Repeat





Original	Replacement	Original	Replacement
	Yellow Yellow / YouTube / Repeat		Yellow / YouTube / Repeat
	Blue Blue / Prime Video / Random		Blue / Prime Video / Random
	[≡] Text / Goto		Text / Goto
	[≡o] Sleep / Timer		Sleep / Timer
	[≡+]/[+] Stop / Hold		Stop / Hold
	[≡x]/[· ·] D.Menu / Top		D.Menu / Top
	[/≡]/[*] Setup / OPT /		Setup / OPT /
	[≡◆]/[X]/Wide Picture / Format		Picture / Format
	[≡◆]/[X]/Wide Zoom / Size		Zoom / Size
	[≡?] Smart / List		Smart / List
	[≡i]/Guide Guide / EPG / -/--		Guide / EPG / -/--

Original	Replacement

