 

 

 

 

 

 

 

 









 

 

 











Original	Replacement	Original	Replacement
 Power	 Power	 Menu	 Menu / Home
 Mute	 Mute / Dimmer	 Source	 AV / Input / RDS
 1	 1	 Up	 Up
 2	 2	 Left	 Left
 3	 3	 Enter	 OK
 4	 4	 Right	 Right
 5	 5	 Down	 Down
 6	 6	 Exit	 Exit / Cancel / Clear
 7	 7	 Display	 Display / Media
 8	 8	 Vol+	 Vol+
 9	 9	 MTS	 Smart / List
 DTV/ATV	 Shift + TV/Radio / Program	 CH+	 CH+ / Page+
 0	 0	 Vol-	 Vol-
 Recall	 Back / Return	 Aspect	 Shift + Picture / Format
 P.Mode	 Picture / Format	 CH-	 CH- / Page-
 S.Mode	 Sound / Title	 FAV/List	 Fav / Marker / PC
 Sleep	 Sleep / Timer	 Media	 Shift + Display / Media





Original	Replacement
 Freeze	 Pause / Step / Freeze
 Guide	 Guide / EPG / -/--
 <<	 << / Tune-
 >>	 >> / Tune+
 I<</Cancel	 I<< / Preset-
 >>I/Sub.Pg	 >>I / Preset+
 Stop/Index	 Stop / Hold
 Play/Pause/TimeShift	 Play / Slow
 Tv/Radio	 TV/Radio /
 Subtitle	 Subtitle / EQ
 Reveal	 Shift + Back / Return
 Size	 Zoom / Size
 Hold	 Shift + Stop /
 Text	 Text / Goto
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat

Original	Replacement
 Cyan	 Blue / Prime Video / Random

