
 














 







 













 

 









Original	Replacement	Original	Replacement
 Power	 Power	 >>	 >> / Tune+
 Open/Close	 Eject / Surround	 >>	 >> / Preset+
 Function	 Smart / List	 Stop	 Stop / Hold
 1	 1	 Play	 Play / Slow
 2	 2	 Pause	 Pause / Step / Freeze
 3	 3	 Speaker Level	 TV/Radio /
 4	 4	 Vol+	 Vol+
 5	 5	 Optical Tv Sound	 Setup / OPT /
 6	 6	 Sound Effect	 Sound / Title
 7	 7	 Vol-	 Vol-
 8	 8	 Mute	 Mute / Dimmer
 9	 9	 Home	 Menu / Home
 Clear	 Exit / Cancel / Clear	 3D Sound	 Shift + Sound / Title
 0	 0	 Info/Menu	 Info / Angle
 Repeat	 Shift + Green / APP /	 Left/Tuning-	 Left
 I<<<	 I<<< / Preset-	 Up/Preset+	 Up
 <<<	 <<< / Tune-	 Right/Tuning+	 Right





Original	Replacement
Enter	OK
Down/Preset-	Down
Back	Back / Return
Title/Pop Up	Picture / Format
Disc Menu	D.Menu / Top
Red/RDS	Red / Netflix / Search
Green/PTY	Green / APP / Repeat
Yellow/PTY Search	Yellow / YouTube / Repeat
Blue/Mono/Stereo	Blue / Prime Video / Random
Subtitle	Subtitle / EQ
Audio	Audio / Lang I/II
Sleep	Sleep / Timer
*	Display / Media
Power Tv	Shift + Power
Volum+ Tv	Shift + Vol+
PR/CH+ Tv	CH+ / Page+
AV Input Tv	AV / Input / RDS

Original	Replacement
Volum- Tv	Shift + Vol-
PR/CH- Tv	CH- / Page-

