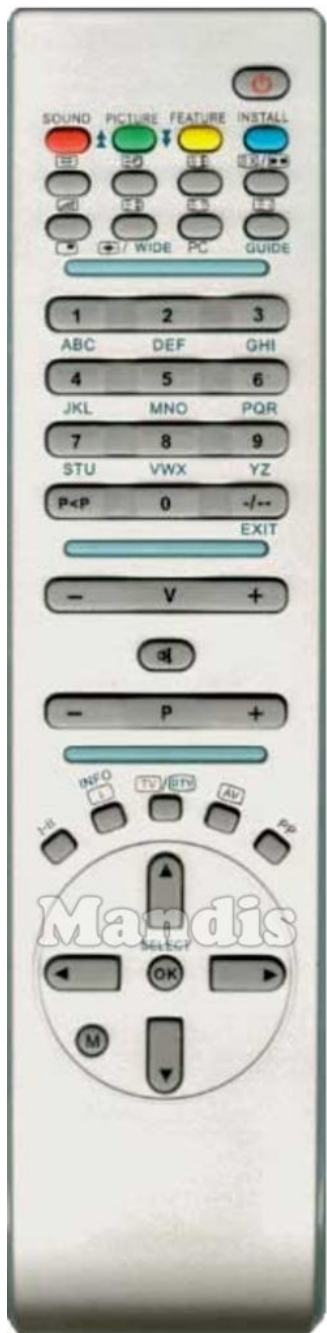

 









 






Original	Replacement	Original	Replacement
 Power	 Power	 5	 5
 Red/Sound ↑	 Red	 6	 6
 Green/Picture/↓	 Green	 7	 7
 Yellow/Feature	 Yellow	 8	 8
 Blue/Install	 Blue	 9	 9
 [=]	 REPEAT TEXT	 0	 0
 [=0]	 SETTINGS OPT	 P<P	 FAV PRE-CH
 [=+]	 AD SUBT	 -/--	 SHIFT + GUIDE
 [=x]/[· ·]	 PICTURE FORMAT	 Vol+	 + VOL
 [/ =] / [*]	 RETURN BACK	 Vol-	 VOL -
 [+](=[♦])/Wide	 ECO 3D	 Mute	 MUTE
 [=?]/PC	 HOME SMART	 P+	 + CH
 [=i]/Guide	 -/-- GUIDE	 P-	 CH -
 1	 1	 I-II	 SOUND DUAL
 2	 2	 [i]/Info	 DISPLAY INFO
 3	 3	 TV/DTV	 SEARCH TV/R
 4	 4	 AV	 TIMER AV





Original		Replacement		Original		Replacement	
	PP		Media				
	Up		Up				
	Down		Down				
	Right		Right				
	Left		Left				
	OK/Select		Ok				
	M		Menu				

