


 








 

 
 
 
 

 


 
 
 

 
 
 

 

 
 


 

 

 

 



 
 


 
 
 

 
 







 











 
 
 
 

 

 
 

 




Original	Replacement	Original	Replacement
 Power	 Power	 i	 DISPLAY INFO Info
 AV	 TIMER AV AV	 + P P+	 + CH Ch +
 1	 1	 - P P-	 - CH Ch -
 2	 2	 MENU	 TOP MENU MENU Menu
 3	 3	 EXIT	 CLEAR EXIT Exit
 4	 4	 OPTION	 SETTINGS OPT Options
 5	 5	 BACK/RETURN	 RETURN BACK Back
 6	 6		
 7	 7		
 8	 8		
 9	 9		
 0	 0	 OK	 OK Ok
 STILL	 STILL	 TV	 SEARCH TV/R TV/R
 Recall	 PICTURE FORMAT Format	 MEDIA	 APP MEDIA Media
 Vol+	 FAV PRE-CH Pre Ch	 GUIDE	 APP MEDIA Media
 Vol-	 + VOL Vol +	 GUIDE	 - / - Guide
 Mute	 VOL Vol -	 [+]	 ECO 3D 3D
	 MUTE Mute	 TIMER	 SHIFT + AV Shift + AV





Original		Replacement		Original		Replacement	
	Text		Text				
	Red		Red				
	Green		Green				
	Yellow		Yellow				
	Blue		Blue				
	Audio		Dual				
	STTL		Subt				
	Sound		Shift + Dual				
	<<		<<				
	Pause		Pause				
	>>		>>				
	Rec		Rec				
	Play		Play				
	Stop		Stop				

