




Original	Replacement
 Power	 Power
 Mute	 Mute
 Source	 AV
 P.Mode	 3D
 S.Mode	 Shift + Dual
 Audio/I-II	 Dual
 P.Size	 Format
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0

Original	Replacement
 Menu	 Menu
 Info	 Info
 Exit	 Exit
 FAV.CH	 Pre Ch
 Sleep	 Sleep
 Jump	 Options
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 Ok
 Vol+	 Vol +
 Vol-	 Vol -
 P+	 Ch +
 P-	 Ch -
 Red/D.Setup	 Red
 Green/Repeat	 Green





Original		Replacement		Original		Replacement	
	Yellow/zoom		Yellow		I<<		I<<
	Blue/Goto		Blue		>>I		>>I
	PVR List		List				
	Time Shift		Smart				
	USB/SD		Media				
	DTV/Radio		TV/R				
	DVD Menu		D. Menu				
	Text		Text				
	Subtitle		Subt				
	Guide		Guide				
	Rec		Rec				
	Stop		Stop				
	Play		Play				
	Pause		Pause				
	Open/Close		Eject				
	<<		<<				
	>>		>>				

